

Verge | Hardshoulder

Hardshoulder

Verge

Min radius 2.5M


Min radius 2.5M

Transverse Ducts (4 x 100mm) in Outer Sleeve

PLAN

## NOTES

- ωΝ This detail is to be used when the transverse ducts are too deep to be accomodated in a 2M deep chamber.
  - For chamber details see drawing NDX1063-01, 02 & 03.
- chamber may be required in order to bring the ducts onto the line of the longitudinal duct route. The two chambers shall be linked with 4 x 100mm, straight ducts at right angles to the longitudinal cable route. Where the topography of the site dictates, a second

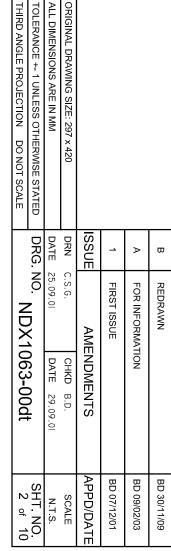

TITLE

TYPICAL INSTALLATION OF DEEP TRANSVERSE DUCTS

This drawing was generated on computer and must not be manually updated

Note:
The NDX series of drawings represents non site specific installations of standard equipment and site layouts.